



# RHBL

Parts List  
03-October-2017



*This parts list is current as of the above revision date.  
See <http://www.rheempartslists.net/92-42800-RHBL.pdf> for the current revision.*

**Air Handlers**

| No.                                       | Notes | MODEL<br>CABINET<br>CAPACITY<br>VOLTAGE                  | RHBL-<br>FR<br>24<br>J | RHBL-<br>FR<br>36<br>J |
|---|-------|--|------------------------|------------------------|
| <b>PANELS, SHEET METAL, MISCELLANEOUS</b> |       |  |                        |                        |
| 1   | 1     | Top Panel  | AE-103095-05           | AE-103095-03           |
|   |       | Insulation - Top Panel                                   | 68-103240-09           | 68-103240-02           |
|   |       | Wire Insulation Retainer                                 | 45-102868-06           | 45-102868-07           |
|   |       | Bushing - Strain Relief (Routing for Thermostat Wires)   | 45-17055-19            | 45-17055-19            |
|   |       | Grommet - 3/8 O.D. Tube                                  | 56-22521-02            | 56-22521-02            |
|   |       | Grommet - Header Tube                                    | 56-22521-05            | 56-22521-05            |
| 2   | 1     | Blower Door (Models without Heater Kit)                  | AE-103093-07           | AE-103093-08           |
| 2   | 1     | Blower Door (Models with Heater Kit)                     | AE-103093-01           | AE-103093-04           |
|   |       | Insulation - Blower Door                                 | 68-103240-03           | 68-103240-13           |
| 3   | 1     | Bottom Panel   | AE-103098-03           | AE-103098-12           |
|   |       | Insulation - Bottom Panel                                | 68-103240-17           | 68-103240-05           |
| 4   | 1     | Middle (Front) Brace                                     | AE-103219-01           | AE-103219-02           |
|   |       | Insulation - Middle (Front) Brace                        | 68-103240-07           | 68-103240-12           |
| 5   |       | Bottom Brace   | AE-103100-01           | AE-103100-02           |
| 6   |       | Plate - Block Off (No Heat)                              | AE-103098-11           | AE-103098-11           |
| 7   |       | Barrier - Heater Box                                     | AE-103098-08           | AE-103098-02           |
| 8   |       | Mounting Bracket - Cabinet                               | AE-103105-01           | AE-103105-01           |
| 9   |       | Mounting Bracket - Wall                                  | AE-103105-02           | AE-103105-02           |
| 10  |       | Blower Shelf   | AE-103096-05           | AE-103096-04           |
|   |       | Bushing - Universal Open/Closed (Beside Control Board)   | 45-103252-02           | 45-103252-02           |
|   |       | Bushing - Strain Relief (Wire Routing from Blower Motor) | 45-17055-11            | 45-17055-11            |
| 11  |       | Divider Panel - Heater Box                               | AE-103098-10           | AE-103098-04           |
| 12  |       | Front Panel - Heater Box                                 | AE-103098-09           | AE-103098-13           |
| 13  |       | Filter   | 54-17531-04            | 54-17531-06            |
| 14  |       | Filter Retainer (4)                                      | AE-103218-01           | N/A                    |
| 14  |       | Filter Rail (2)  | N/A                    | AE-103218-04           |
| 15  |       | Cover - Circuit Breaker                                  | 68-103316-01           | 68-103316-01           |
| 16  |       | Coil Bracket - Left                                      | See Coil Group         |                        |
| 17  |       | Coil Bracket - Right                                     | See Coil Group         |                        |
| 18  |       | Drain Pan  | See Coil Group         |                        |
| 19  |       | Coil   | See Coil Group         |                        |
| 36  |       | Control Cover  | AE-103328-01           | AE-103328-01           |

| No.                     | Notes | MODEL<br>CABINET<br>CAPACITY<br>VOLTAGE  | RHBL-<br>FR<br>24<br>J    | RHBL-<br>FR<br>36<br>J |
|-------------------------|-------|--|---------------------------|------------------------|
| <b>ELECTRICAL GROUP</b> |       |  |                           |                        |
| 20                      | Stk   | Transformer  | 46-101905-01              | 46-101905-01           |
| 21                      | Stk   | Control Board  | 47-100436-02              | 47-100436-02           |
| 22                      |       | Terminal Block   | 45-23222-02               | 45-23222-02            |
| 23                      |       | Grounding Lug  | 45-19000-01               | 45-19000-01            |
|                         |       | Switch - Drain Pan Overflow Protection (Option 417)                              | 42-103356-01              | 42-103356-01           |
|                         |       | Wiring Harness - 6 Pin Plug to 6 Stripped Wires (For T-Stat)                     | 45-101891-03              | 45-101891-03           |
|                         |       | Wiring Harness - 2 Pin Molex to 2 Stripped Leads (Power Input to Terminal Block) | 45-24371-57               | 45-24371-57            |
|                         |       | Circuit Breaker  | See Heater Kit Parts List |                        |
|                         |       | Wiring Harness - Circuit Breaker to 2 Pin Connector                              | See Heater Kit Parts List |                        |
|                         |       | Wiring Harness - 4 Pin Connector from Control Board to Heater                    | See Heater Kit Parts List |                        |

| No.                 | Notes | MODEL<br>CABINET<br>CAPACITY<br>VOLTAGE       | RHBL-<br>FR<br>24<br>J | RHBL-<br>FR<br>36<br>J |
|---------------------|-------|---|------------------------|------------------------|
| <b>BLOWER GROUP</b> |       |   |                        |                        |
| 24                  | Stk   | Blower Assembly (Includes items listed below) | AS-103222-05           | AS-103222-06           |
| 25                  |       | Blower Housing w/Wheel                        | 70-103221-02           | 70-103221-01           |
|                     | Stk   | Blower Wheel                                  | 703022                 | 703021                 |
| 26                  |       | Motor Mount - Band                            | 70-19927-04            | 70-19927-04            |
| 27                  |       | Motor Mount - Arm (4)                         | 70-19929-10            | 70-19929-11            |
| 28                  | Stk   | Blower Motor (X-13)                           | 51-101879-07           | 51-101880-18           |
| 32                  |       | Bolt  | 63-19919-01            | 63-19919-01            |
| 33                  |       | Locknut                                       | 63-17189-03            | 63-17189-03            |
| 34                  |       | Washer (4)                                    | 63-26198-02            | 63-26198-02            |
| 35                  |       | Screw (4)                                     | 63-101978-01           | 63-101978-01           |